

Email : ppp@ppp.com

SPFDisk(FDisk) 『(Boot Manager)』 1.44
。 SPFDisk
。

[SPFDisk 2000-03t](#)

1.DOSwin98

```
Windows 98 has detected that drive C does not contain a valid FAT or
FAT32 partition. There are several possible causes.

1. The drive may need to be partitioned. To create a partition on the drive,
run FDISK from the MS-DOS command prompt.

2. You may be using third-party disk-partitioning software. If you are using
this type of software, remove the Emergency Boot Disk and restart your
computer. Then, follow the on-screen instructions to start your computer from
a floppy disk.

3. Some viruses also cause your drive C to not register. You can use a virus
scanning program to check your computer for viruses.

The diagnostic tools were successfully loaded to drive C.

MSCDEX Version 2.25
Copyright (C) Microsoft Corp. 1986-1995. All rights reserved.
Drive D: = Driver MSCDB001 unit 0
Drive E: = Driver MSCDB001 unit 1

To get help, type HELP and press ENTER.

A:\>_
```


2.spfdisk spfdisk



3.spfdisk ENTER。



4. ENTER。

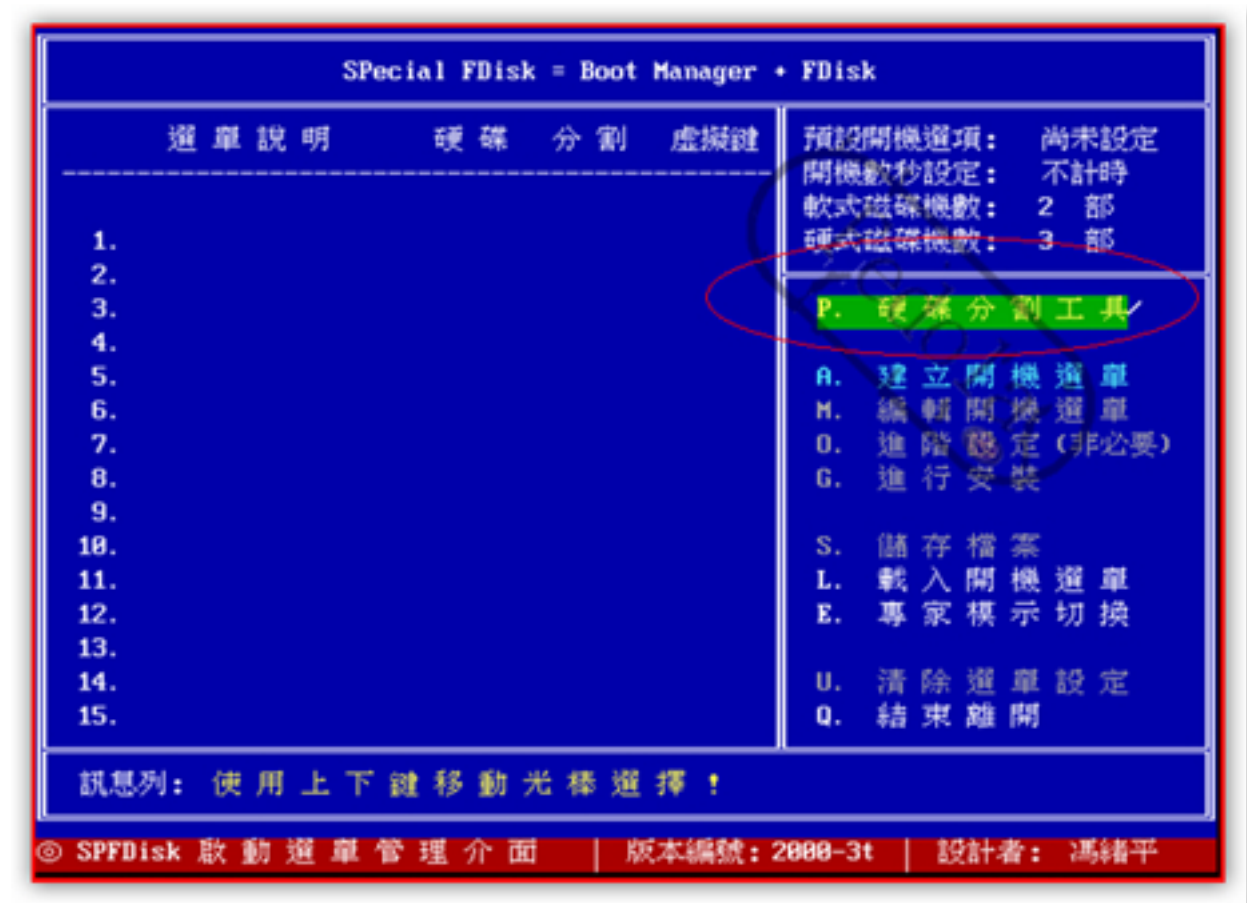

5.



6ENTER20G1024、10001000。


硬碟機數： 3磁柱： 2610磁頭： 255磁區： 63工作硬碟： 1

分割	啟動	啟動磁柱	結束磁柱	使用空間	系統ID	系統種類
???	0	2609	19.99GB	<未配置>	:	

總容量： 19.99GB已分配： %0.0 | 擴充分割： 0.00KB已分配： %0.0

訊息列： [Esc]:回啟動管理選單， [TAB]:功能選單， [↑][↓]↵:處理分割

© SPFDisk 分割工具管理介面 | 版本編號： 2008-3t | 設計者： 馮緒平

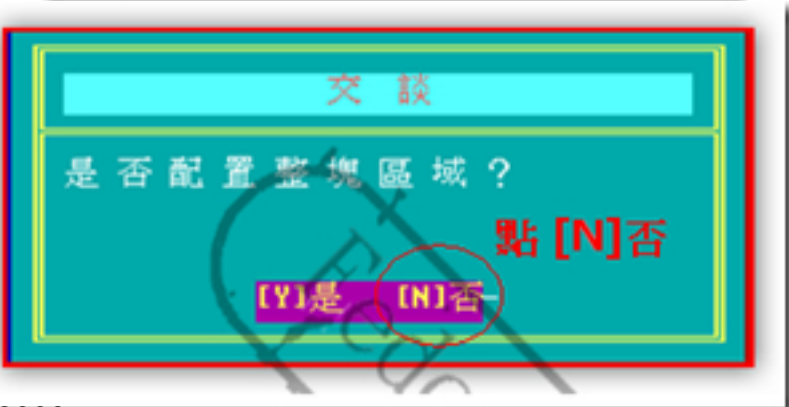

88000: 8g







9 2 7.81G 8G 1024 1000



硬碟機數： 3 磁柱： 2618 磁頭： 255 磁區： 63					工作硬碟： 1	
分割	啟動	起始磁柱	結束磁柱	使用空間	系統ID	系統種類
1		0	1019	7.81GB	0b	DOS FAT32
???		1020	2689	12.18GB		<未配置>
總容量： 19.99GB 已分配： %39.1 擴充分割： 0.00KB 已分配： %0.0						
訊息列： [Esc]:回啟動管理選單, [TAB]:功能選單, [↑][↓] ←:處理分割						
© SPFDisk 分割工具管理介面 版本編號： 2000-3t 設計者： 馮緒平						

10.

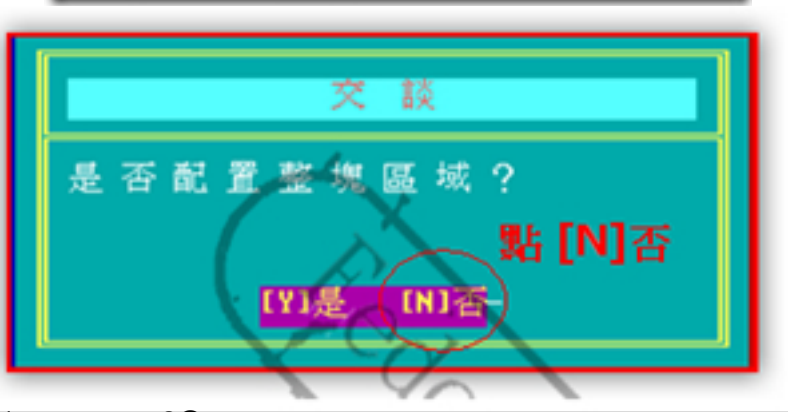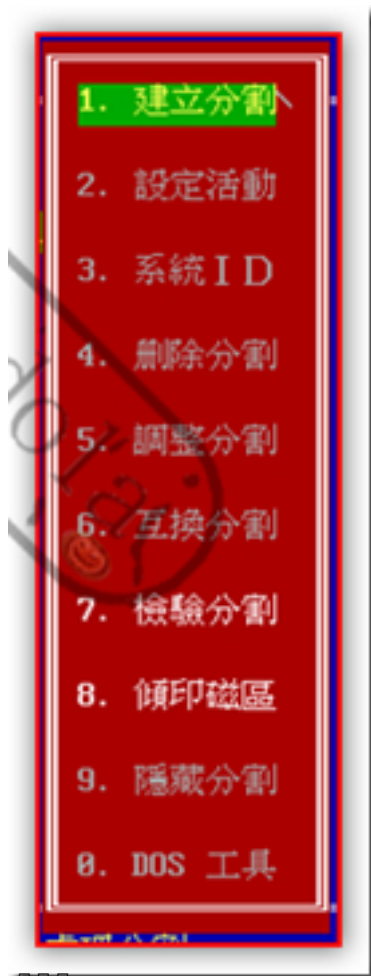

11.8G






12.。


硬碟機數： 3 磁柱： 2610 磁頭： 255 磁區： 63						工作硬碟： 1	
分割	啟動	起始磁柱	結束磁柱	使用空間	系統ID	系統種類	
1		0	1019	7.81GB	0b	DOS FAT32	
2		1020	2039	7.81GB	0c	DOS FAT32 (LBA)	
???		2040	2609	4.37GB	<未配置>		
總容量： 19.99GB 已分配： %78.2 擴充分割： 0.00KB 已分配： %0.0							
訊息列： [Esc]: 回啟動管理選單, [TAB]: 功能選單, [↑][↓] ←: 處理分割							
© SPFDisk 分割工具管理介面				版本編號： 2008-3t		設計者： 馮緒平	

13.



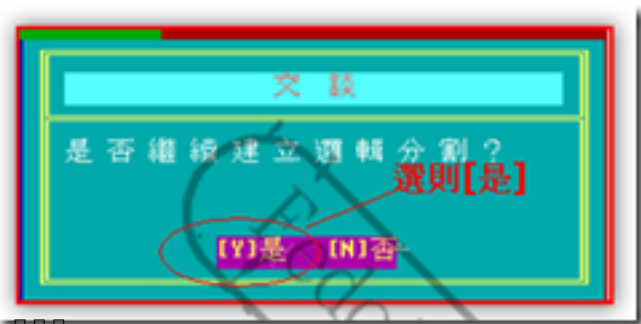

000

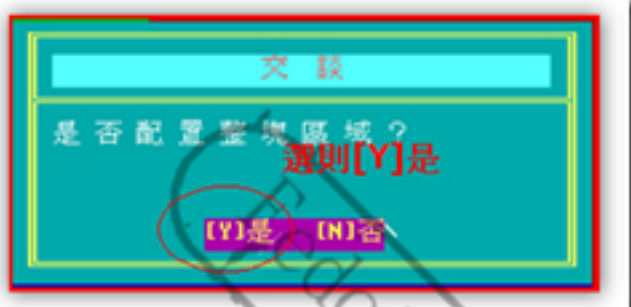

15



000

1. 建立分割

2. 設定活動:

3. 系統 I D

4. 刪除分割

5. 調整分割

6. 互換分割

7. 檢驗分割

8. 傾印磁區

9. 隱藏分割

8. DOS 工具

硬碟機數: 3 磁柱: 2618 磁頭: 255 磁區: 63 工作硬碟: 1

分割	啟動	起始磁柱	結束磁柱	使用空間	系統ID	系統種類
1	▼	0	1819	7.81GB	8b	DOS FAT32 ✓
2		1820	2839	7.81GB	8c	DOS FAT32(LBA)
3		2840	2689	4.37GB	8f	DOS Extend(LBA)
[邏輯]						
5		2840	2689	4.37GB	8c	DOS FAT32(LBA)


總容量: 19.99GB

已分配: %100.0 | 擴充分割: 4.37GB

已分配: %100.0

訊息列: [Esc]: 回啟動管理選單, [TAB]: 功能選單, [↑][↓] ←: 處理分割

© SPFDisk 分割工具管理介面 | 版本編號: 2000-3t | 設計者: 馮緒平

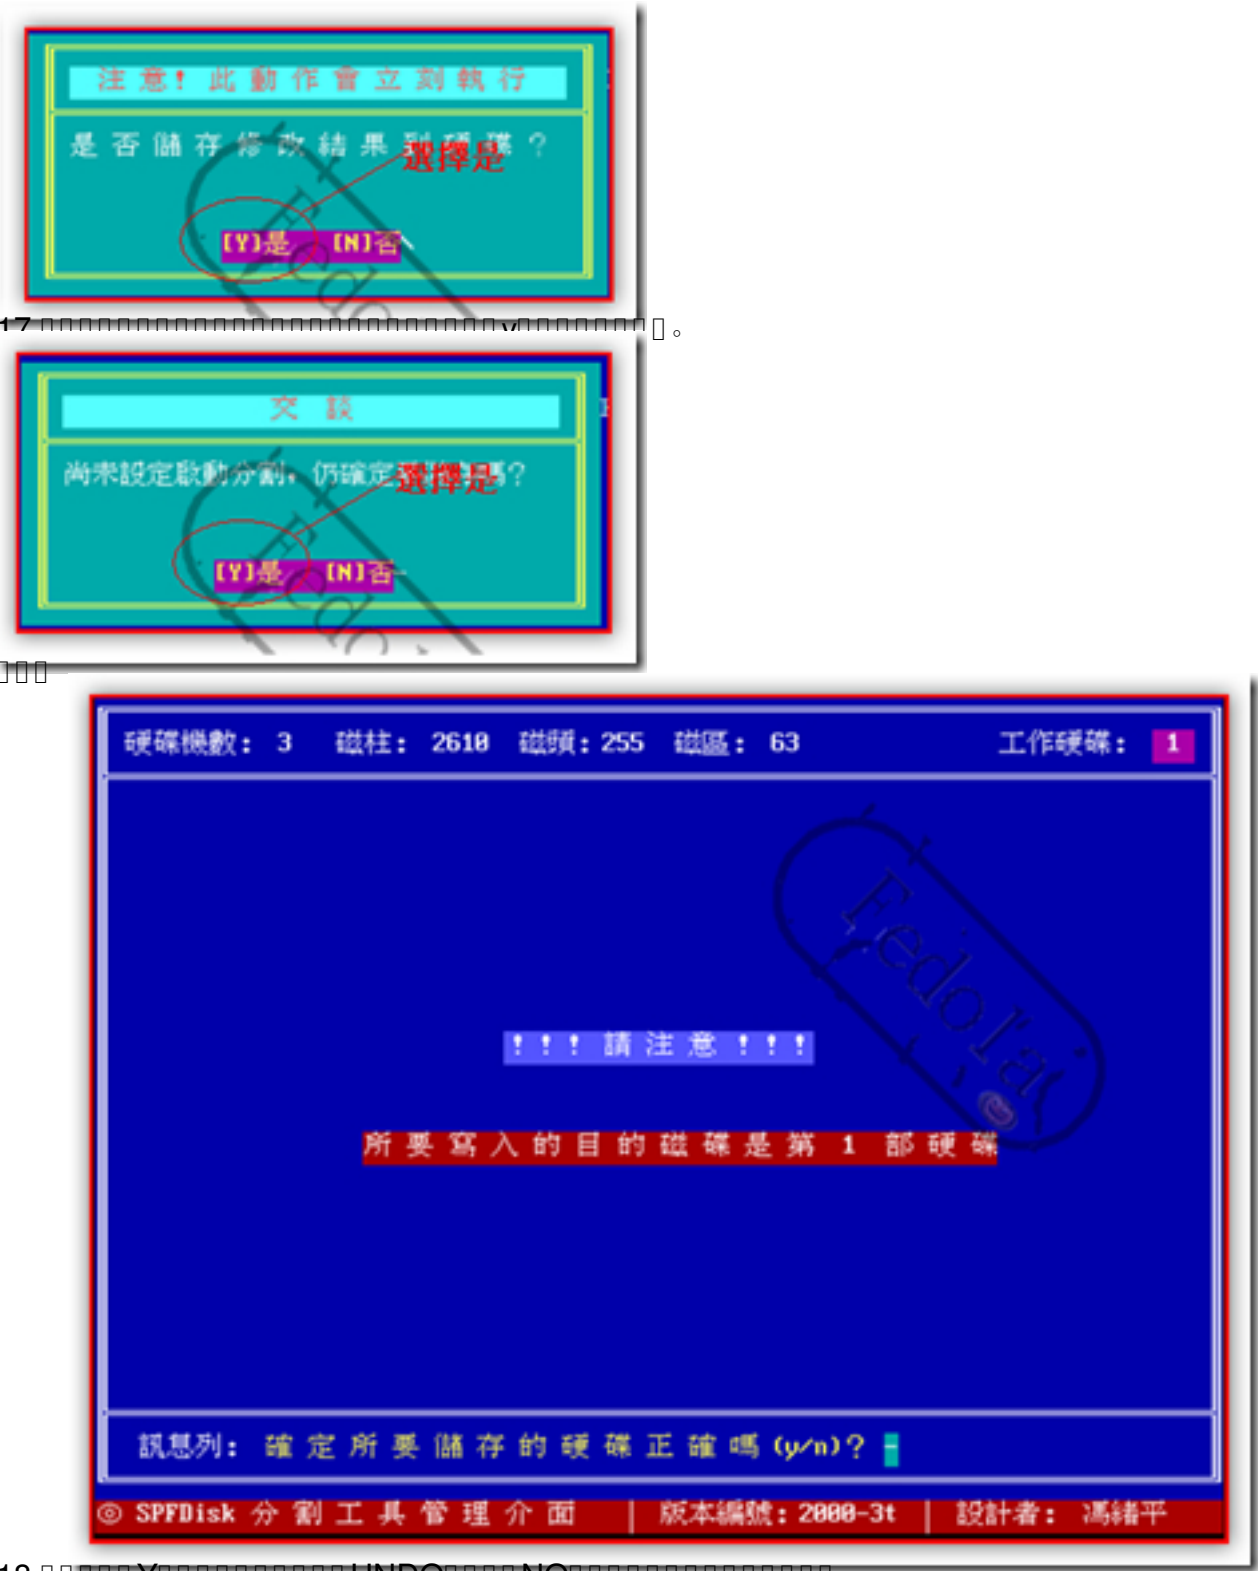

18. Y UNDO NO

